

# DeoxIT®

## Perfect-Straw™ Hacks

## HACK #3

*Info*

### CAIG Perfect-Straw™ Hacks.

### Creating Custom Attachments to the New DeoxIT® Sprays

#### #3 HACK - Connecting Red straw to Yellow straw!

##### What you need:

- Get your free red straw from CAIG. Send email to [info@caig.com](mailto:info@caig.com) and request Part No. CL-EXT-PSX.
- Find, get or buy a #44 drill (0.086", 2.1844 or 2.2 mm).
- Small hand drill as shown.
- You can purchase online at <https://goo.gl/BUvpFn>
- Small X-Acto knife or straight edge razor blade.

##### Measure and cut the Red and Yellow straws:


- Decide how long you want the Red straw.
- Cut the red straw with the straight edge blade/knife.
- Measure and mark the Yellow straw with a marker.
- Make sure the total length of the Yellow and Red straw. Does not exceed past the bottom of the can.
- Cut the Yellow straw with the blade/knife.

##### Enlarge the inside diameter of the Yellow straw:

- Using a #44 drill (0.086" or 2.1844 mm).
- Attached the #44 drill to the Hand Drill.
- Carefully and slowly turn/drill into the Yellow straw about 1/4" to 3/8".
- Make sure you remove any drilled particles from inside the Yellow straw.

##### Attach the Red straw to the Yellow straw:

- Insert the Red straw into the Yellow straw – should be a tight fit.
- FIRST USE:** Hold can and straw away from you and test spray a few times onto a cloth or into a trash can.

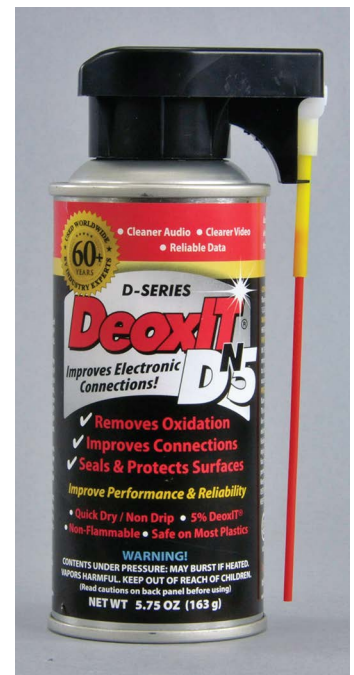

Home of the DeoxIT® family of  
Environmentally-Safer Contact Cleaners and  
Connector Enhancing Treatments  
Made in USA